

The Application Note is pertinent to the AC Drives

A Replacement Solution from Horizon to Commander SK

The Horizon AC drive was an adjustable frequency, adjustable voltage (VVI) ac motor controller. It was designed for single phase input power (115/230 vac) with a three phase output for 3-phase squirrel cage induction motors. Three models were available covering the range of ¼ to 1 Hp. The units were supplied in a Nema 1 enclosure (optional Nema 4/12 conversion kit). This drive had three basic functions: Start/stop switch, speed pot and an optional fwd/rev selector. The table below shows a cross reference to currently available Digital AC drives.

Horizon Model	Input Voltage	Output Amps	Commander SK	Input Voltage	Output Amps
2990-8000	120vac, 1ph	3.2	SKB1100075**	240vac, 1ph	4.0
2990-8002	240vac, 1ph	2.0	SKA1200037	240vac, 1ph	2.2
2990-8005	240vac, 1ph	3.6	SKA1200055 SKA1200075	240vac, 1ph 240vac, 1ph	3.0 4.0

** The output of the 120vac unit (SKB1100075) is 240vac, not 120vac as is the case for the 2990-8000



The Commander SK are fully digital PWM type, open loop vector ac motor controllers. Just as the Horizon, the drive has start/stop, fwd/rev and a "digital" speed pot on the front cover. In addition to the simple features provided with the Horizon, the Commander SK have many advanced features (PID loop, MOP function, Preset speeds, S-ramp and dc injection braking to mention a few) available including serial communications and field bus connectivity.

Click on the image of the Commander SK drives above or the link below to obtain more information on the Commander SK

http://www.emersonct.com/download_usa/literature/07catalogpdfs/024-039-CommSK.pdf




Commander SK sizes A and B

Please click on links below for additional information

[General Specifications](#)
[Ratings](#)
[Dimensions](#)
[Cable and Fuse](#)
[Standards](#)
[Literature](#)
[Manuals](#)
[Software](#)
[Options/Software](#)

Terminal Diagram

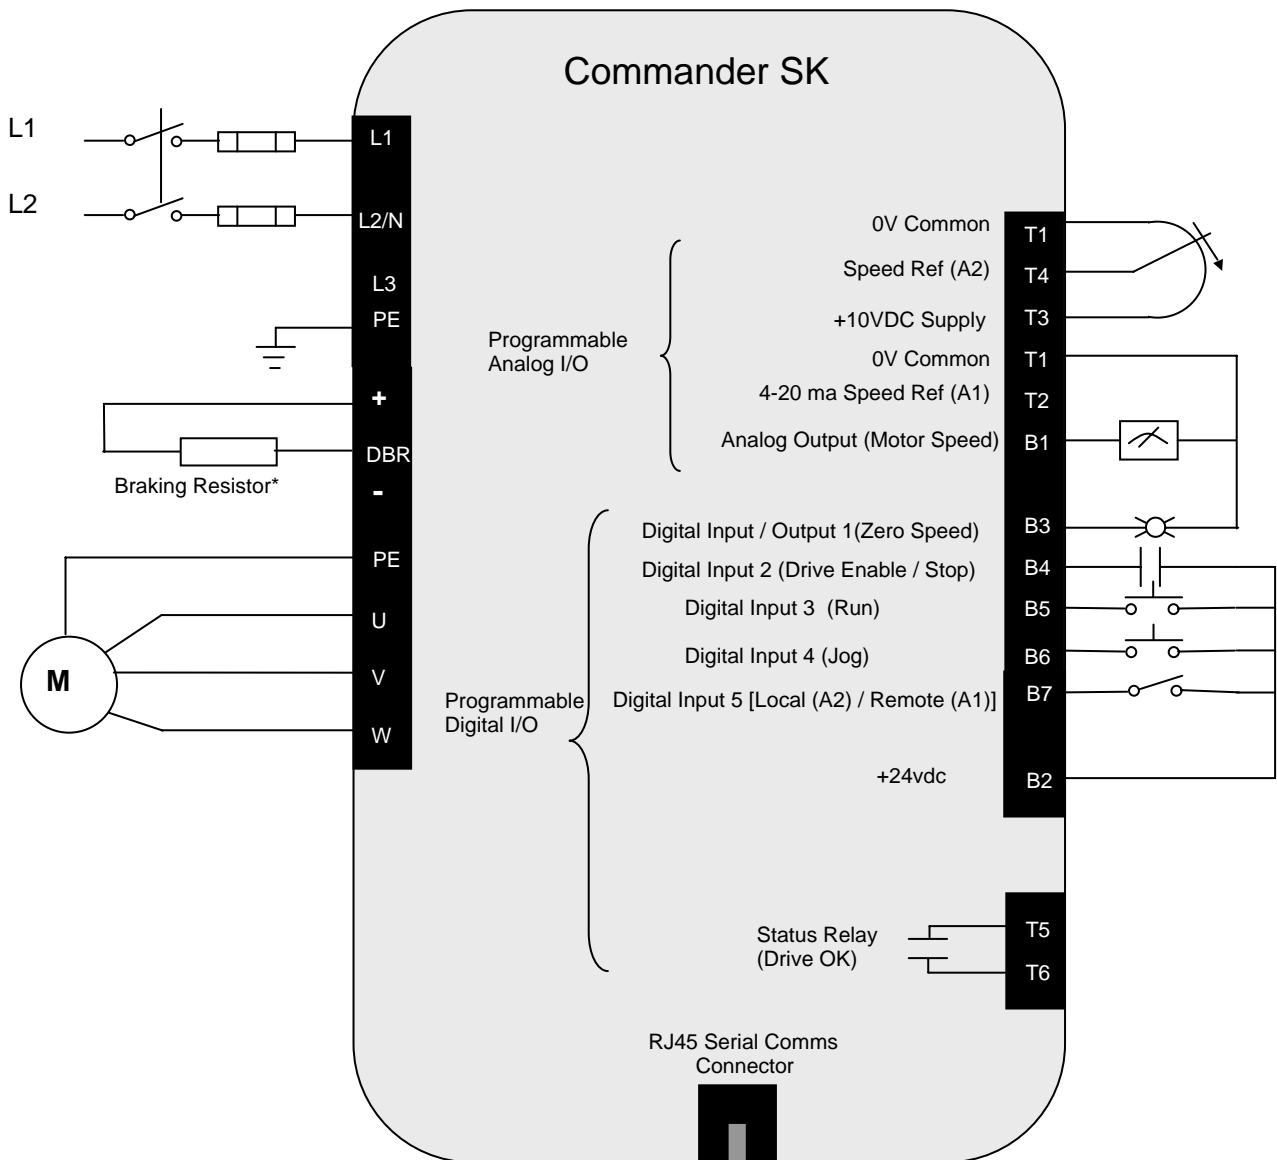

Notes

* Thermal protection required.

** Commander S Size A is single-phase input only.

For complete instructions, refer to the Commander SK User Guide.

Steve Zaleski Email: <mailto:steve.zaleski@emerson.com>

