
This Technical Note is pertinent to our Unidrive SP Drive Family

Unidrive SP Essential Codes

All codes above below are to be entered at xx.00

(Where xx is any menu ie #00.00, 5.00, 12.00 etc)

- 1000 Save parameters when under voltage is not active (Pr **10.16**= 0) and low voltage DC supply is not active (Pr **6.44** = 0).
- 1001** Save parameters under all conditions
- 1070 Reset all option modules
- 1233 Load standard defaults
- 1244** Load USA defaults- for the selected mode of operation (per 0.48)
- 1253 Enable Change of Drive mode of operation with standard European defaults
- 1254** Enable Change of Drive mode of operation with USA defaults (via 0.48)
- 1255 Enable Change of drive mode with standard defaults (excluding menus 15 to 20)
- 1256 Enable Change of drive mode with USA defaults (excluding menus 15 to 20)

All codes above require a RESET to complete the action

Other Special Codes

- 12000 Displays non-default values only- differences from default
- 12001 Display destination parameters only

After setting xx.00 to these codes, one would peruse each menu for differences or source/destination assignments.

