

## Unidrive Classic, Unidrive SP, Commander GP20, and Commander SK

### Fault Code Diagnostics

Unidrive Classic



Unidrive SP  
Commander GP20



Commander SK



Unidrive Classic Fault Description	Unidrive SP Fault Description	Commander SK Fault Description
<b>HF Trip Codes</b>		<b>HF Trip &amp; Misc Codes</b>
<b>Parameter Security</b>	<b>Parameter Security</b>	<b>Parameter Security</b>
<b>OU Trip</b>	<b>OU Trip</b>	<b>OU Trip</b>
<b>OL<sub>AC</sub> Trip</b>	<b>OL<sub>AC</sub> Trip</b>	<b>OL<sub>AC</sub></b>
<b>Will Not Run</b>	<b>Will Not Run</b>	<b>OL<sub>SPd</sub></b>
<b>IL<sub>AC</sub> Trip</b>	<b>IL<sub>AC</sub> Trip</b>	<b>IL<sub>AC</sub></b>
<b>OL<sub>2</sub> Trip Code Sizes 1-4</b>	<b>OL<sub>2</sub> Trips</b>	<b>OL<sub>d1</sub></b>
<b>OL<sub>HSn</sub> Size 5</b>		<b>OL<sub>1</sub></b>
	<b>Unidrive SP &amp; EZmotion</b>	<b>SCL</b>
	<b>Unidrive SP &amp; EZ Motion</b>	<b>PH</b>
<b>UD7x Modules tr Trips</b>		<b>rS</b>
	<b>IL<sub>br</sub> Trip Code</b>	<b>c<sub>r</sub>t9</b>
<b>OL<sub>Pc</sub> or AdOL<sub>1</sub> Size 5</b>		<b>c<sub>d</sub>At</b>
<b>Fault Isolation- Size 5</b>		
	<b>Option Module Trip Codes</b>	<b>Option Module Trip Codes</b>
		<b>Common Trip Codes/Causes</b>
<b>Input Power Problems</b>	<b>Input Power Problems</b>	<b>Input Power Problems</b>

Click on fault of interest



**SCIGATE AUTOMATION (S) PTE LTD**

No.1 Bukit Batok Street 22 #01-01 Singapore 659592

Tel: (65) 6561 0488

Fax: (65) 6562 0588

Email: sales@scigate.com.sg

Web: www.scigate.com.sg

Business Hours: Monday - Friday 8.30am - 6.15pm