



SCIGATE AUTOMATION (S) PTE LTD

No.1 Bukit Batok Street 22 #01-01 Singapore 659592

Tel: (65) 6561 0488

Fax: (65) 6562 0588

Email: sales@scigate.com.sg

Web: www.scigate.com.sg

Business Hours: Monday - Friday 8.30am - 6.15pm

# Device/PLC Connection Manuals



## About the Device/PLC Connection Manuals

Prior to reading these manuals and setting up your device, be sure to read the "Important: Prior to reading the Device/PLC Connection manual" information. Also, be sure to download the "Preface for Trademark Rights, List of Units Supported, How to Read Manuals and Documentation Conventions" PDF file. Furthermore, be sure to keep all manual-related data in a safe, easy-to-find location.

# Fenwal Connectable Devices


The following tables list the devices that can be connected and used with the GP.

## ■ Controllers

Series	Controller	Device type in Screen Editor
AL series	AL24R-□□□-□□□-□□□ <sup>*1*2</sup>	Fenwal AL series

*\*1 Fenwal's Temperature Controller Model Number*

*When connected to the GP/GLC, only a model with RS-485 communication ability can be used for communication. Such a model can be identified using a suffix to the basic model, which represents that communication capability. For further information on models, refer to the AL series catalog.*

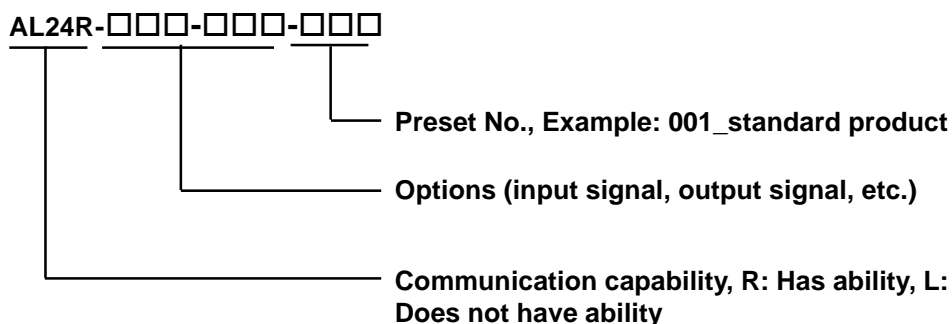

*\*2 For the temperature controller, a production number of 02010023 or later and a serial number of 0204 or later are required.*