## **Pro-face**



**Digital** Human Machine Interface

SCIGATE AUTOMATION (S) PTE LTD No.1 Bukit Batok Street 22 #01-01 Singapore 659592 Tel: (65) 6561 0488 Fax: (65) 6562 0588 Email: sales@scigate.com.sg Business Hours: Monday - Friday 8.30am - 6.15pm

# Device/PLC Connection Manuals



## About the Device/PLC Connection Manuals

Prior to reading these manuals and setting up your device, be sure to read the "Important: Prior to reading the Device/PLC Connection manual" information. Also, be sure to download the "Preface for Trademark Rights, List of Units Supported, How to Read Manuals and Documentation Conventions" PDF file. Furthermore, be sure to keep all manual-related data in a safe, easy-to-find location.

## **IDEC** Connectable Devices

The following tables list the devices that can be connected and used with the GP.

### ■ PLCs

#### ♦ 1:1 Connection

| Series Name        | СРИ                | Link Unit       | Comments              | Device type in<br>Screen Editor        | GP Series<br>GLC 2000<br>Series | GLC 100<br>Series<br>GLC 300<br>Series |
|--------------------|--------------------|-----------------|-----------------------|--|---------------------------------|--|
| FA-2J<br>FA-3S     | PF2-CPU1           | CPU Direct      | For an RS-            | ction, a<br>apter<br>_A or<br>ter link | 0                               | x                                      |
|                    | PF2-CPU5M          | Connection      | 232C<br>connection, a |  |                                 |  |
|                    | PF2J-CPU1          | CPU Direct      |                       |  |                                 |  |
|                    |                    | Connection      | link adapter          |  |                                 |  |
|                    | PF3S-CP11,         | CPU Direct      | PF2-CLA or            |  |                                 |  |
|                    | PF3S-CP12,         | Connection      | computer link         |  |                                 |  |
|                    | PF3S-CP13          |                 | interface unit        |  |                                 |  |
|                    | PF3S-CP12,         | PF3S-SIF2       |                       |  |                                 |  |
|                    | PF3S-CP13          | PF3S-SIF4       |                       |  |                                 |  |
| MICRO <sup>3</sup> | MICRO <sup>3</sup> | CPU Direct      |                       |  |                                 |  |
|                    |                    | Connection      |                       | MICRO3                                 |                                 |  |
| MICROSmart         | FC4A-C10R2B        | RS-232C port on |                       |  |                                 |  |
| FC4A series        | FC4A-C16R2B        | CPU module      |                       |  |                                 |  |
| (All-in-one        | FC4A-C24R2B        | RS-232C         |                       |  |                                 |  |
| type)              |                    | Communication   |                       |  |                                 |  |
|                    |                    | Board (Mini DIN |                       |  |                                 |  |
|                    |                    | type)           |                       |  |                                 |  |
|                    |                    | FC4A-PC1        |                       |  |                                 |  |
|                    |                    | RS-485          |                       | IDEC<br>FC3/FC4A<br>Series             | 0                               | 0                                      |
|                    |                    | Communication   |                       |  |                                 |  |
|                    |                    | Board (Mini DIN |                       |  |                                 |  |
|                    |                    | type)           |                       |  |                                 |  |
|                    |                    | FC4A-PC2        |                       |  |                                 |  |
|                    |                    | RS-485          |                       |  |                                 |  |
|                    |                    | Communication   |                       |  |                                 |  |
|                    |                    | Board (Terminal |                       |  |                                 |  |
|                    |                    | type)           |                       |  |                                 |  |
|                    |                    | FC4A-PC3        |                       |  |                                 |  |

\*1 When connecting the GP with Izumi Electric's FA Series PLC, setup the object PLC to match the CPU.

| СРО                                | Device type in<br>Screen Editor |  |
|------------------------------------|---------------------------------|--|
| PF2-CPU1                           | IZUMI IDEC_1                    |  |
| PF2J-CPU1, PF3S-CP11               | IZUMI IDEC_2                    |  |
| PF2-CPU5M, PF3S-CP12,<br>PF3S-CP13 | IZUMI IDEC_3                    |  |