



SCIGATE AUTOMATION (S) PTE LTD

No.1 Bukit Batok Street 22 #01-01 Singapore 659592

Tel: (65) 6561 0488

Fax: (65) 6562 0588

Email: sales@scigate.com.sg

Web: www.scigate.com.sg

Business Hours: Monday - Friday 8.30am - 6.15pm

Device/PLC Connection Manuals



About the Device/PLC Connection Manuals

Prior to reading these manuals and setting up your device, be sure to read the "Important: Prior to reading the Device/PLC Connection manual" information. Also, be sure to download the "Preface for Trademark Rights, List of Units Supported, How to Read Manuals and Documentation Conventions" PDF file. Furthermore, be sure to keep all manual-related data in a safe, easy-to-find location.

Koyo Electronics Industries Connectable Devices

The following tables list the devices that can be connected and used with the GP.

■ PLCs

◆ 1:1 Connection

Series Name	CPU	Link Unit	Comments	Device type in Screen Editor	GP Series GLC 2000 Series	GLC 100 Series GLC 300 Series		
KOSTAC SG	SG-8	Link I/F on CPU unit	Disconnect the programming console when communicating	KOYO KOSTAC-SG8 series	○	X		
		G-01DM						
KOSTAC SU	SU-5 SU-6	Link I/F on CPU unit						
		U-01DM						
	SU-6B	Link I/F on CPU unit						
	SU-5M SU-6M	Link I/F on CPU unit						
KOSTAC SZ	SZ-4	Link I/F on CPU unit						
KOSTAC PZ3	PZ3-16ND1-16TD1 PZ3-T PZ3M	Link I/F on CPU unit						
KOSTAC SR	SR-21 SR-22	E-02DM-R1					KOYO KOSTAC-SR21/22 Series	
DL205	D2-240	Link I/F on CPU unit*1					KOYO DL-205/405 Series	
DL405	D4-430 D4-440	D4-DCM						
		Link I/F on CPU unit*1						
DL305	D3-330	D3-DCM		KOYO DL-305 Series				
Direct Logic 05	D0-05AA D0-05AD D0-05AR D0-05DA D0-05DD D0-05DD-D D0-05DR D0-05DR-D	Link I/F on CPU unit		KOYO KOSTAC-SG8 series				

* 1 Connected to CPU module's general communication port.