



SCIGATE AUTOMATION (S) PTE LTD

No.1 Bukit Batok Street 22 #01-01 Singapore 659592

Tel: (65) 6561 0488

Fax: (65) 6562 0588

Email: sales@scigate.com.sg

Web: www.scigate.com.sg

Business Hours: Monday - Friday 8.30am - 6.15pm

# Device/PLC Connection Manuals



## About the Device/PLC Connection Manuals

Prior to reading these manuals and setting up your device, be sure to read the "Important: Prior to reading the Device/PLC Connection manual" information. Also, be sure to download the "Preface for Trademark Rights, List of Units Supported, How to Read Manuals and Documentation Conventions" PDF file. Furthermore, be sure to keep all manual-related data in a safe, easy-to-find location.

# Toyoda Machine Works Connectable Devices

The following tables list the devices that can be connected and used with the GP.

## ■ PLCs

### ◆ 1:1 Connection, 1:n Connection

Series Name	CPU	Link Unit	Device type in Screen Editor	GP Series GLC 2000 Series	GLC 100 Series GLC 300 Series
TOYOPUC -PC2	PC2, L2	TLU-2652	TOYOTA TOYOPUC-PC2 series	○	○
	PC2J	THU-2755			
	PC2J (1:n connection)	THU-2755	TOYOTA TOYOPUC-PC2 1:n Comm.		
TOYOPUC -PC3	PC3J	Link I/F on CPU unit	TOYOTA TOYOPUC-PC3J	○	x
	PC3JD	THU-2755			
	PC3JG	THU-2755	TOYOTA TOYOPUC-PC3J 1:n Comm.		
	PC3J PC3JD PC3JG (1:n connection)	Link I/F on CPU unit THU-2755			