Flex Network I/O Unit 8-point Relay Output/ 1 Common Type Installation Guide

Thank you for purchasing Pro-face's "Flex Network I/O Unit 8-point Relay Output/1 Common Type" (FN-Y08RL41) unit. To ensure correct use of this unit's functions and features, be sure to carefully read this installation guide and the Flex Network DIO Unit User Manual (downloaded from Pro-face web

Safety Precautions

This guide contains a variety of safety markings for safe and correct operation of this unit. Please read this installation guide and any related manuals carefully to fully understand how to correctly use this unit's functions.

■ Safety Symbols

This guide uses the following symbols for important information related to the safe and correct operation of this unit. Please pay attention to these symbols and follow all instructions given. Safety symbols and their meanings:

1 DANGER	A hazardous situation that could result in serious injury or even death if instructions are not followed.		
	A notantially hazardays situation that		
WARNING	A potentially hazardous situation that could result in serious injury or even death if instructions are not followed.		
	A (11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
A CAUTION	A potentially hazardous situation that could result in minor injury or equipment damage if instructions are not followed.		

Specifications

■ Electrical (Control section)

Rated Voltage	DC24V	
Rated Voltage Range	DC20.4 to DC28.8V	
Allowable Voltage Interruption	10ms or less (Power Supply: DC24V)	
Power Consumption	1W or less	
Voltage Endurance	AC1,500V 10mA 1minute	
Voltage Lituurance	(between power/Input and Output, and FG terminals)	
Insulation Resistance	DC500V at $10M\Omega$ or higher	
	(between power/Input and Output, and FG terminals)	
In-rush Current	30A or less	

■ Environmental

Ambient Operating Temperature	0°C to 55°C	
Ambient Storage Temperature	-25°C to +70°C	
Ambient Humidity	5% RH to 95% RH (non-condensing) (wet bulb temperature: less than 39°C)	
Protection Rating	IP20	
Pollution Level	Pollution Level 2	

Output				
Rated Output Voltage (from +V to -V)		DC24V		
Rated Output Voltage Range (from +V to -V)		DC20.4 to DC28.8V		
Power Consumption		1.2W or less (when all outputs are ON / DC24V)		
No. of Output Points		8 points/1 common		
Maximum Load Voltage		1.0A/1 point (8 points/1 common - Max.common current 4.0A)		
Contact Rating		AC240V, 1A (resistance load, induced load) DC24V, 1A (resistance load, induced load)		
Outrout Delevi Time	OFF-ON	10ms or less		
Output Delay Time	ON-OFF	5ms or less		
Min. Open / Close Load		1mA/DC5V		
Initial Shorting Resistance		50 m Ω or less		
Electrical Life		100,000 operations or more		
Mechanical Life		20 million operations or more		
No. of Exclusive Use Nodes		1		

DANGERS

- An emergency stop circuit and an interlock circuit should be constructed outside of this unit. Constructing these circuits inside this unit may cause a runaway situation, system failure, or an accident due to unit failure
- Systems using this unit should be designed so that output signals which could cause a serious accident are monitored from outside the unit.
- This unit is designed to be a general-purpose device for general industries, and is neither designed nor produced to be used with equipment or systems in potentially life-threatening conditions. If you are considering using this unit for special uses, including nuclear power control devices, electric power devices, aerospace equipment, medical life support equipment, or transportation vehicles, please contact your local Flex Network distributor.

⚠ WARNINGS


- Whenever installing, dismantling, wiring, and conducting maintenance or inspections, be sure to disconnect power to this unit to prevent the possibility of electric shock or fire
- Do not disassemble or remodel this unit, since it may lead to an electric
- Do not use this unit in an environment that contains flammable gases since an explosion may occur.
- Do not use this unit in an environment that is not specified in either the Installation Guide or User Manual. Otherwise, an electric shock, fire, malfunction or other failure may occur.
- Because of the possibility of an electric shock or malfunction, do not touch any power terminals while the unit is operating.

CAUTIONS

- Communication cables or I/O signal lines must be wired separately from the main circuit (high-voltage, large-current) line, high-frequency lines such as inverter lines, and the power line. Otherwise, a malfunction may occur due
- This unit must be properly installed according to directions in the installation guide and user's manual. Improper installation may cause the unit to malfunction, or fail.
- This unit must be properly wired according to directions in the Installation Guide and User Manual. Improper wiring may cause a malfunction, failure
- Do not allow foreign substances, including chips, wire pieces, water, or liquids to enter inside this unit's case. Otherwise, a malfunction, failure, electric shock, or fire may occur
- When disposing of this unit, handle it as an industrial waste

3 Output Circuit Connection Drawing

The COM's power supply can be changed according to the relay specifications.

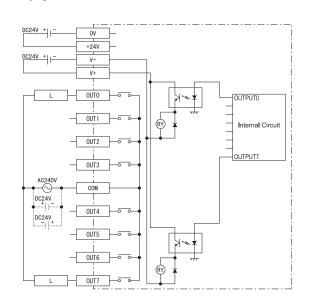

Note: the sensor's power supply snound of September 1. The I/O unit's power supply should be separated from being affected by external noise.

■ To Avoid Damage

- · Avoid storing or operating this unit in either direct sunlight or excessively dusty or dirty environments.
- · Because this unit is a precision instrument, do not store or use it in locations where excessive shocks or vibration may
- · Avoid covering this unit's ventilation holes, or operating it in an environment that may cause it to overheat.
- Avoid operating this unit in locations where sudden temperature changes can cause condensation to form inside the
- Do not use paint thinner or organic solvents to clean this unit

Package Contents

■ Flex Network I/O Unit Type (FN-Y08RL41)



■ Flex Network I/O Unit 8-point Relay Output/1 Common 8-point Relay Output/1 Common Type

Installation Guide (this guide)



Manual

You can download the Flex Network DIO Unit User Manual from Pro-face's web site.(http://www.pro-face.com/) If you require the manual on another type of media (CD-ROM, etc.), please contact your local Pro-face distributor.

4 I/O Unit Installtion


■ Installing on a DIN rail:

This procedure installs the unit on a 35mm DIN rail.

♦ Installation

♦ Removal Use a screwdriver to push the

Hook the I/O unit's top face groove over the top edge of the attachment hook down and re-DIN rail. Next, push the bottom lease the unit. Then, pull the unit of the I/O unit forward until the forward and off the rail. attachment hook clicks into

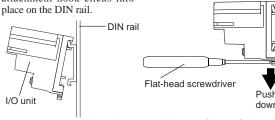




Be sure that the top and bottom faces of the unit are facing the correct direction and the unit is installed in a vertical position. Incorrect installation may prevent heat from dissipating.

■ Installing in a panel:

Create a panel cut for installing the unit, using the dimensions given below. Secure the I/O unit in place with M4 size screws. The torque should be 0.5 to 1.3 N•m.

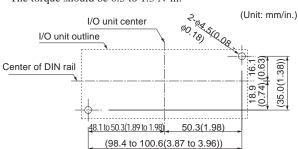

UL/c-UL (CSA) Application Notes

The FN-Y08RL41 is a UL/c-UL (CSA) recognized unit. (UL File No. E195835)

The FN-Y08RL41 unit conforms to the following standards:

- UL508 Electrical Control System for Industry
- CAN/CSA-C22.2 No.1010-1 (Safety requirements for electrical equipment for measurement, control and laboratory use)

FN-Y08RL41 (UL Registration Model: 2880063-04)

Only use the unit installed with other equipment.

- If the unit is installed in an area with no air conditioning system, be sure to install it in a vertical panel using a DIN rail or mounting holes. Also, be sure the unit is installed so it is at least 100 mm away from any adjacent structures or devices. If these requirements are not met, the heat generated by the unit's internal components may cause the unit to fail to meet UL standards requirements
- The power supply unit connected to the I/O unit must be a UL/c-UL (CSA) approved Class 2 power supply unit or Class 2 transformer*1. When the GLC/LT/GP3000 or multiple I/ O units under load are operated with a single power supply, the amount of current consumption and full-load current of the I/O units must be within the rated load of the Class 2 power supply unit or Class 2 power supply transformer. Be aware that the number of points which can be turned ON simultaneously may be limited, depending on the amount of load and load current value.

CE Marking Notes

The FN-Y08RL41 is a CE Marked unit that conforms to EMC directives EN55011 ClassA, EN61000-6-2, and EN61131-2*2. <Caution>

While this unit is officially marked as conforming to the relevant EMC directives, it is the user's final application of this unit in a larger system (i.e. the machinery, wiring, control panel, installation method, etc.) that will determine if this unit maintains or loses this conformance marking. Therefore, it is strongly advised that the user investigate and confirm whether their overall system (i.e. all related machinery and equipment) also conforms with these EMC direc-

*1 The National Electrical Code states that Class 2 power supplies and Class 2 transformers should not exceed an output of 30V, and at 8A or less, should not exceed 100VA. *2 Applies to selected low voltage directives.

This section shows the external dimensions of the I/O unit, part names and part settings. Pro-Groce FN-Y08RL41 rese 2000)**(\$**\$\$\$ 108(4.25) 3.5(0.14) Side View

1 External Dimensions / Part Names

Front View Factory (Default) settings 6 Mbps **Bottom View**

Communication speed: S-No. (station no.): 0 Output hold: Non Hold

Set output hold, communication speeds and S-No. (first digit) during operation errors. B: S-No. (station) Switch Sets S-No. (last digit) Changes termination ON/OFF. Turns ON only C: Terminal Switch

the unit connected at the end of the com tion cable

D: Status LED. Indicates the unit's current operation status. **♦** Examples of S-No. (station no.) settings

♦ Switch Settings N 6 SW1 N...Hold, H Hold 1 2 3 4 H 12 (Output unit only SW2 6 Mbps 12 Mbps SW3, 4 First ... ON (1), Last ... OFF (0) Arrow tip Setting values

A: Dip Switches

Dip Switch S-No. (Station SW3 SW4 no.) Setting OFF(0) ON(1) ON(1) ON(1 OFF ... Termination OFF, ON Termination ON



When a logic program switches from RUN mode to OFFLINE mode, the GLC/LT/GP3000 and I/O signals operate as shown below regardless of the output hold settings. Therefore, be sure to consider this operation before resetting the unit or switching to OFFLINE mode



However, when performing Reset, the I/O signal OFF timin

5 Wiring the I/O

This section describes both the cables and crimp terminals used for wiring each type of cable. The fastening torque for the terminal screws should be 0.6 to 1.0 Nom. 1 or 2 terminals can be connected to a single terminal screw.

■ Communication Cable


The Flex Network interface and the I/O unit, or all distributed I/O units, are connected using a cross wiring system. (T-type systems cannot be used.)

Use the following models of communication cables.

Distributor	Order Code	Length
Pro-face	FN-CABLE2010-31-MS	10m
	FN-CABLE2050-31-MS	50m
	FN-CABLE2200-31-MS	200m

When preparing the cable wire ends:

 - Cover shielded wires with shield tape or with an insulation
- Use insulated crimp terminals.
- If you use a pressure connection terminal without insulation, cover it with a shield tape or an insulation tube. Cover uninsulated crimp terminals with shield tape or a tube-type insulation.



■ Power Cable

- Use as large a cable as possible (up to 1.25 mm²) and be sure to twist all wire ends before attaching crimp terminals.
- Use the same type crimp terminals as used for the communication cable.

■ I/O Cable

- Use a cable that is 0.5 to 1.25 mm² in diameter.
- Use the same type crimp terminals as used for the communication cable.



Note

Confirm that all I/O unit terminal screws are securely tightened, even if they are not used.

Do not allow pieces of wire to fall inside the unit.



No.1 Bukit Batok Street 22 #01-01 Singapore 659592 Tel: (65) 6561 0488 Fax: (65) 6562 0588 Email: sales@scigate.com.sg Business Hours: Monday - Friday 8.30am - 6.15pm

Please be aware that Digital Electoronics Corporation shall not be held liable by the user for any damages, losses, or third party claims arising from the uses of this product.

Head Office

Digital Electronics Corporation

8-2-52 Nanko-higashi Suminoe-ku, Osaka 559-0031 JAPAN Tel: +81-(0)6-6613-1101 Fax: +81-(0)6-6613-5888 URL: http://www.pro-face.com/

©Copyright 2000 Digital Electronics Corporation. All rights reserved.