

CF Card

Installation Guide



SCIGATE AUTOMATION (S) PTE LTD
No.1 Bukit Batok Street 22 #01-01 Singapore 659592
Tel: (65) 6561 0488 Fax: (65) 6562 0588
Email: sales@scigate.com.sg Web: www.scigate.com.sg
Business Hours: Monday - Friday 8.30am - 6.15pm



CAUTION

This product is not designed or manufactured for use in a device or system that is to be used under circumstances where human life is potentially at stake. Please contact the Digital Electronics Corporation or an authorized agent when considering the use of this product for special applications, such as with equipment or systems for transportation, moving, medicine, aerospace, nuclear, or for undersea data communication.

1. Introduction

Thank you for your purchasing the Digital Electronics Corporation's CF Card. For instructions on the proper use of this product, be sure to read this manual thoroughly before use.

After reading, please store this manual in a safe place for future reference.

2. Using the CF Card

It is recommended that the CF card be used indoors. To avoid CF card malfunction, do not use the CF card in the following locations.

- 1) Where temperature, humidity or levels of dust are excessively high.
- 2) Where excessive vibration can occur, i.e. near engines or motors.

CF Card Handling Cautions:

(data loss/card malfunction may occur)

- 1) Do not bend the CF card.
- 2) Do not drop or strike the CF card against another object.
- 3) Do not submerge the CF card in water or get it wet.
- 4) Do not touch the CF card's connector terminals directly with either your fingers or sources of electrostatic energy and/or contamination.
- 5) Do not take apart or modify the CF card.

When storing important information on the CF card, be sure to back up your data to some type of media.

3. CF Card Insertion

Familiarize yourself with the differences between the top and bottom surfaces of the CF card. Also, be sure to read the manual to ensure that the CF card is properly oriented when it is inserted (i.e. whether the top of the card is up or down, etc.) First, hold the CF card by the end opposite the connector, and slowly insert it into the CF card slot. If the card seems to jam or is too tight, remove the CF Card. Confirm that the card is properly oriented and that there are no obstructions in the sides of the card insertion slots. (For details, refer to the manual)

2. ご使用方法

カードは屋内での使用をお薦めします。また、次の環境での使用は、故障の原因となりますので避けてください。

- ・温度や湿度の高い場所
- ・塵やほこりの多い場所
- ・振動の多い場所(エンジン、モーターの側など)

次のような取り扱いはいししないでください。記録データが消えたり故障の原因となります。

- ・無理に曲げること。
- ・落としたり強いショックを与えること。
- ・水に漬けたり、濡らしたりすること。
- ・コネクタ端子部を直接手で触れること。
- ・分解や改造をすること。

重要なデータをカードに記録する場合、必ず他の記録メディアにバックアップしてください。

1. はじめに

この度はCFカードをお買い上げいただき、ありがとうございます。

ご使用の前に、取扱説明書をよくお読みの上、正しくお使いください。お読みになった後は必ず保管してください。



注意

本製品は、人命にかかわるような状況の下で使用される機器あるいはシステムに用いられることを目的として設計、製造されたものではありません。次の用途での使用をご検討の際には、あらかじめ(株)デジタルまたは代理店へご確認ください。

- ・運輸、移動体用、医療用、航空宇宙用、原子力制御用、海底中継用機器あるいはシステム。
- ・その他人命、財産、自然環境に重大な影響を及ぼす恐れのある機器あるいはシステム。

4. CF Card Removal

Press in the eject button, hold the edge of the CF card with your fingers, and slowly pull the card out.

5. CF Card Storage

CF Card Storage Cautions:

To avoid damage, discoloration or deformation, do not store the CF Card in the following locations.

- 1) Where the temperature, humidity or levels of dust are high.
- 2) Where it will be exposed to direct sunlight.
- 3) Near fire or heating equipment.
- 4) In areas where corrosive gas is present.

6. Troubleshooting

If the CF card becomes damaged, do not use it, since it may cause a malfunction. In no event will the Digital Electronics Corporation be held responsible for any accidental data loss, damages or losses caused by a CF Card malfunction or abnormal operation.

7. Cleaning the CF card

Do not insert the CF card if any of the CF Card's connectors is contaminated by dust or dirt. Doing so may cause the CF card to malfunction.

8. Removing the CF Card

If you remove or re-insert the CF card while data is being copied to it, all data saved on the CF card may be destroyed. For details about removing or inserting the CF card, refer to the Unit's User Manual.

Note

Be aware that the Digital Electronics Corporation shall not be held liable for any real or estimated damages or losses, or third party claims resulting from the use of this product.

CF カード

取扱説明書

Pro-face®

株式会社 デジタル

〒559-0031

大阪市住之江区南港東8-2-52

TEL: (06) 6613-1101 (代)

FAX: (06) 6613-5888

URL: <http://www.proface.co.jp/>

Digital Electronics Corporation

8-2-52 Nanko-higashi

Suminoe-ku, Osaka 559-0031 JAPAN

TEL: +81-(0)6-6613-3116

FAX: +81-(0)6-6613-5888

<http://www.pro-face.com/>

© Copyright 2003 Digital Electronics All rights reserved

CA3-CFCARD-MT02-CP SS/B