

# SD Memory Card Installation Guide

<http://www.pro-face.com>

Please check that all items listed here are present in a package before using them.

SD Memory Card (1), Storage Case (1),

Installation Guide (1) <This Guide>

This product has been carefully packed, with special attention to quality. However, should you find anything damaged or missing, please contact your local distributor immediately.

When using your product and a SD Memory Card, observe the following to avoid losing valuable data:

- As accidental data loss can occur at any time, back up panel screen and SD Memory Card data regularly.
- Before using the SD Memory Card, familiarize yourself with the SD Memory Card's front and rear face orientation, as well as the position of the SD Memory Card connectors. If the SD Memory Card is not positioned correctly when inserted into your product, the Card's internal data and your product could become damaged.

These are trademarks of SD-3C, LLC.



## NOTICE

### LOSS OF DATA

- Insert the SD Memory Card properly.
- While a SD Memory Card is accessed, do not turn OFF or reset your product, and do not remove the SD Memory Card.
- Before removing the SD Memory Card from your product, stop all operations on the SD Memory Card.
- Do not store the SD Memory Card where there is static electricity or electromagnetic waves.
- Do not store the SD Memory Card in direct sunlight, near a heater, or other locations where high temperatures can occur.
- Do not bend the SD Memory Card.
- Do not drop or strike the SD Memory Card against another object.
- Keep the SD Memory Card dry.
- Do not touch the SD Memory Card connectors.
- Do not disassemble or modify the SD Memory Card.
- Format the SD Memory Card with the file system required by your product.
- Do not place a label on the SD Memory Card.



SCIGATE AUTOMATION (S) PTE LTD

No. 1 Bukit Batok Street 22 #01-01 Singapore 659592

Tel: (65) 6561 0488

Fax: (65) 6562 0588

Email: [sales@scigate.com.sg](mailto:sales@scigate.com.sg)

Web: [www.scigate.com.sg](http://www.scigate.com.sg)

Business Hours: Monday - Friday 8.30am - 6.15pm

**Failure to follow these instructions can result in equipment damage.**

### Disclaimer


- Digital Electronics Corporation shall not be liable for any damages arising out of use other than as described in this guide.
- Digital Electronics Corporation shall not be liable for any damages arising out of malfunction caused by use in combination with connected devices.
- Digital Electronics Corporation shall not be liable for any damages arising out of fires, earthquakes, acts by third parties, other incidents, user's intentional or negligent misuse, or use under other abnormal conditions.
- Digital Electronics Corporation shall not be liable for any damages, including losses in business profits, suspension of business operations, and changes or losses in the saved data, arising out of the use of or inability to use this product.

Digital Electronics Corporation does not offer any data recovery services.

For information on the models and manuals compatible with this product, visit Pro-face Home Page (<http://www.pro-face.com/otasuke/>).

### Note

- As shown in the image below (example on the left-hand side), you can set the Write-Control Tab to prevent write operations to the SD Memory Card. Push the tab up, as shown in the example on the right-hand side, to release the lock and enable writing to the SD Memory Card.

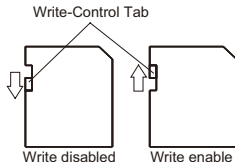

The information in this document is subject to change without notice.

Copyright © 2013.9 Digital Electronics Corporation. All Rights Reserved.

EAV37028 00

**Pro-face**  
for the best interface