


The Application Note is specific to the products that can host a SM-DeviceNet module. This includes Unidrive SP, Mentor MP, Commander GP20, Affinity, and Commander SK families.

SM-DeviceNet **Configuration Save, Restore and Re-initialization**

Scope – There has been some confusion regarding the use of three of the SM-DeviceNet Module's advanced parameters:

- Parameter **MM.31** "SM-DeviceNet **Save** option (backup)"
- Parameter **MM.32** "SM-DeviceNet **Re-Initialize**"
- Parameter **MM.33** "SM-DeviceNet **Restore** parameters".

This application note will clarify these related parameters and their use. The most common reason one deals with these parameters as a group is to move a configured and functional SM-DeviceNet module from a failed drive and restore the configuration and operation of the module on the replacement drive.

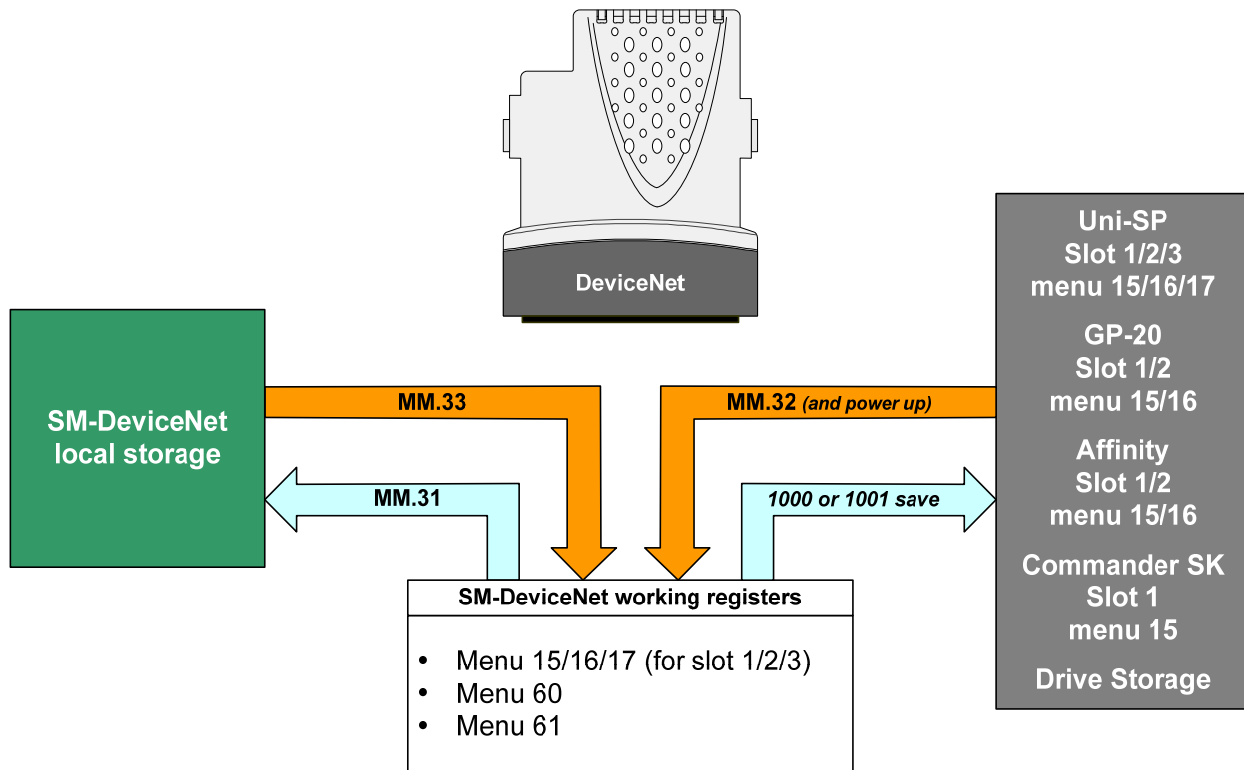

Where:

MM is 15 for Slot 1
MM is 16 for Slot 2
MM is 17 for Slot 3

Details

Save option (backup)

Parameter **#15.31** (slot 1) / **#16.31** (slot 2) / **#17.31** (slot 3) [See last page for details](#)

This parameter is set to a value of **On** ("1") to insure that the present working configuration is saved within the SM-DeviceNet's local non-volatile storage. This is usually done after making any significant configuration change within the SM-DeviceNet module. This is also the first step to moving a configured SM-DeviceNet module to a different (replacement) UniSP, Commander GP20, Affinity or Commander SK.

This parameter requires a "drive save" to save, both the current configuration within the drive', as well as initiating an internal store within the SM-DeviceNet module of the menu 15, 16 or 17 set-up configuration.

Restore

Parameter **#15.33** (slot 1) / **#16.33** (slot 2) / **#17.33** (slot 3) [See last page for details](#)

This parameter is set to a value of **On** ("1") to insure copy the contents of the SM-DeviceNet's local non-volatile storage to the SM-DeviceNet's present working registers. This is usually only done after moving a configured SM-DeviceNet module to a different (replacement) UniSP, Commander GP20, Affinity or Commander SK, to restore the configuration.

This step is followed by a "Drive Save" (setting MM.00= 1000 followed by the Red Reset button) to insure that the current configuration is saved within menu 15, 16 or 17 and available for the next power-up.

Re-initialize

Parameter **#15.32** (slot 1) / **#16.32** (slot 2) / **#17.32** (slot 3) [See last page for details](#)

This parameter is set to a value of **On** (1) to after any changes in the slot menu contents of the host drive to "force" the SM-DeviceNet to re-initialize and use the new configuration information. This is the last step after moving a configured SM-DeviceNet module to a different (replacement) UniSP, Commander GP20, Affinity or Commander SK, to force re-initialization with the restored configuration now present in the drive slot memory.


Additional Notes

Parameters **#MM.32** and **#MM.33** are "*self-resetting*" and set themselves back to a value of **Off** ("0") when complete. SM-DeviceNet re-initialize can take a modest amount of time to complete; the other two are quick enough to miss the "*self-reset*" with a keypad.

For a Commander SK, it may be necessary to "map" these advanced parameters into menu zero to make this accessible. For more information on how to access parameters outside menu 0, consult [CTAN272](#) Short video illustrating this procedure→



UnidriveSP Option Slot Details

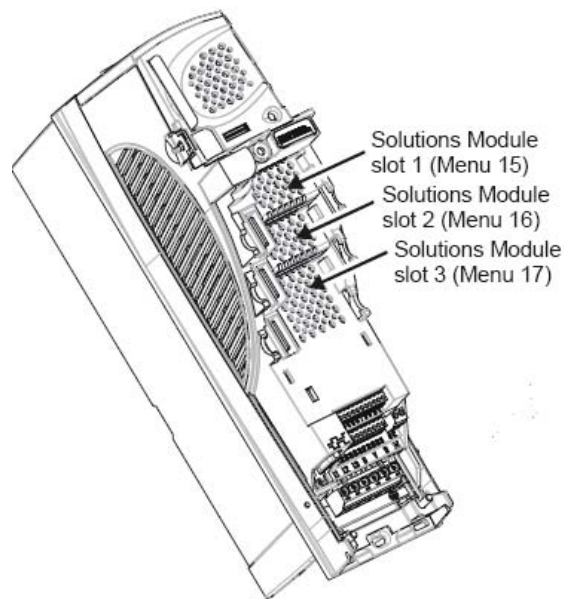

Size 0 Slot Location

Solution
Module
slot 2 (Menu
16)



Solution
Module
slot 1 (Menu
15)



Menu 15	=	Slot 1
Menu 16	=	Slot 2




SCIGATE AUTOMATION (S) PTE LTD
 No.1 Bukit Batok Street 22 #01-01 Singapore 659592
 Tel: (65) 6561 0488 Fax: (65) 6562 0588
 Email: sales@scigate.com.sg Web: www.scigate.com.sg
 Business Hours: Monday - Friday 8.30am - 6.15pm

Author: Jim Jeffers e-mail : mailto:jim.jeffers@emerson.com
 (716)-774-1193 x123